

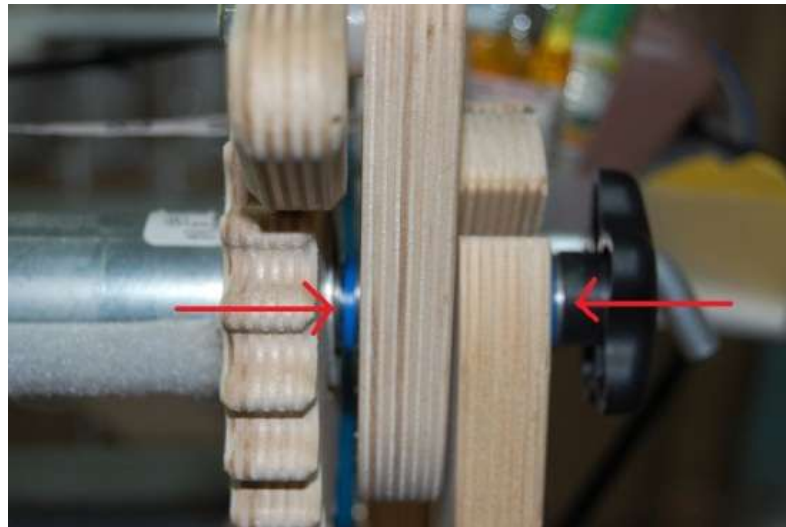


Attaching ball bearings and hand wheel

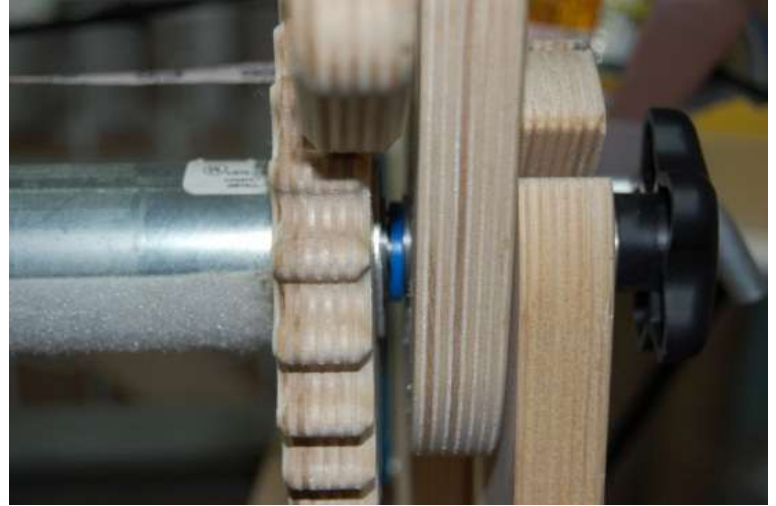

When attaching a hand wheel, don't use a ball bearing like in the picture above beside the black star knob on the right. Just attach the hand wheel by itself, with no ball bearing, like below, and then attach the star knob on the outside.

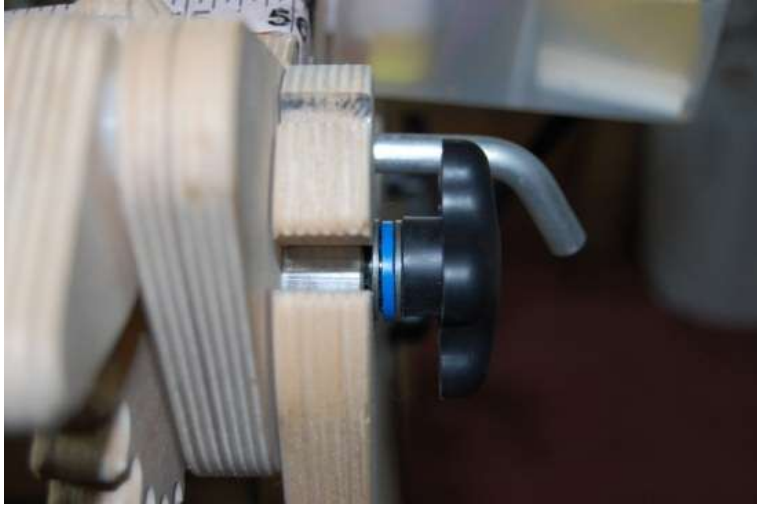